

SWISSLOG SPECIFICATIONS

STATION ACCESS DOOR FOR RECESSED PEVCO™ PNEUMATIC TUBE STATIONS*



Swisslog's Station Access Door is designed to provide controlled access to recessed stations manufactured by Pevco™. The Station Access Door provides added safety and security through the use of an electromagnetic lock and is ideal for stations located in public areas.

**Pevco™ pneumatic tube stations are manufactured by Pevco Systems International and has no affiliation with Swisslog.*

Designed for Stations Using Any PTS Control Panel

Swisslog's Station Access Door operates independently from the station control panel and can be easily installed on both 4-inch and 6-inch Pevco™ manufactured recessed stations using Pevco™ or Swisslog control panels.

The Station Access Door securely locks access to the station bin using electromagnetic technology. The electronic keypad is constructed with a smooth, stainless steel surface providing durability and long-life. Once a valid PIN is entered into the keypad, the Station Access Door releases the lock. After opening, the spring-loaded door automatically closes and the lock is reactivated after a programmable timer expires. The Station Access Door stores up to 5 user PIN combinations (up to 8-digits each). The PIN combinations can be changed using a master code.

Features & Benefits

- > Stations located in public areas benefit from added security, preventing children and unauthorized access to station contents and from initiating system sends
- > Limits access to sensitive items to authorized personnel
- > Addresses HIPAA concerns by increasing security and patient privacy

swisslog

Station Access Door for Pevco™ stations*



Specifications

The Station Access Door is constructed of powder-coated steel with a clear polycarbonate window. The station access door is compatible with both 4-inch and 6-inch recessed stations.

Part Number: 56674501

Dimensions:

Door


Length: 18.9"
Width: 26.9"

Window

Length: 13.9"
Width: 20.25"

Power Requirements:

115 VAC, 60 Hz
(available at station)

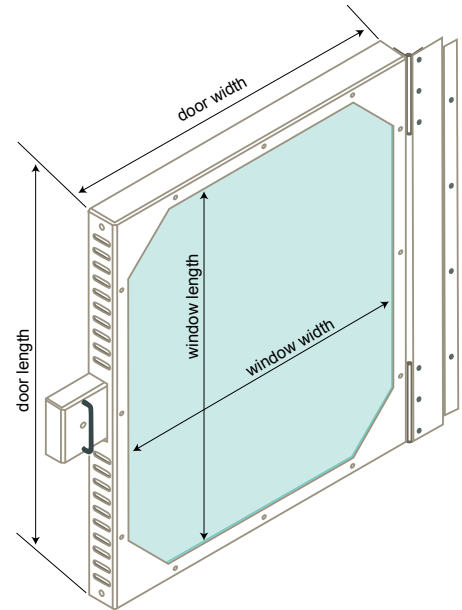

Other Station Access Doors:

Station Access Door for Quantum Stations (CM# PTS-209)

Station Access Door for TransLogic Stations* (CM# PTS-207)

**Pevco™ pneumatic tube stations are manufactured by Pevco Systems International and has no affiliation with Swisslog.*

Due to ongoing improvement programs, Swisslog reserves the right of production or design change without notice or obligation.

For More Information in North America:

Swisslog Healthcare Solutions
Email: healthcare@swisslog.com
USA: (800) 764-0300
Canada: (877) 294-2831 | (905) 629-2400

©2009 Swisslog
CM# PTS-208

WWW.SWISSLOG.COM