

# Swisslog Customer Support

## Station Access Door


### The Station Access Door

### for Stations Using I.Q. Control Panels

Swisslog's Station Access Door is designed to provide limited access to a station, offering added safety and security. Only authorized users with a valid PIN can open the door and gain access to the contents of the stations interior. Transaction tracking is simplified with the option to assign each individual user with a unique Personal Identification Number (PIN).

The Station Access Door is secured by an electromagnetic lock and can be opened by entering a valid PIN into the I.Q. Control Panel. The electromagnetic lock releases and the I.Q. Panel LCD display notifies the user that the door is ready to be opened. If the user enters an invalid PIN, the LCD display informs the user that the PIN was invalid. After the door has been successfully opened, the electro-magnetic lock automatically resets, allowing the user enough time to send or receive as needed.

The Station Access Door is constructed of powder-coated steel with a clear polycarbonate window. The door is currently available for both 4-inch and 6-inch Recessed Stations using I.Q. Control Panels with Swisslog's Matrix software.

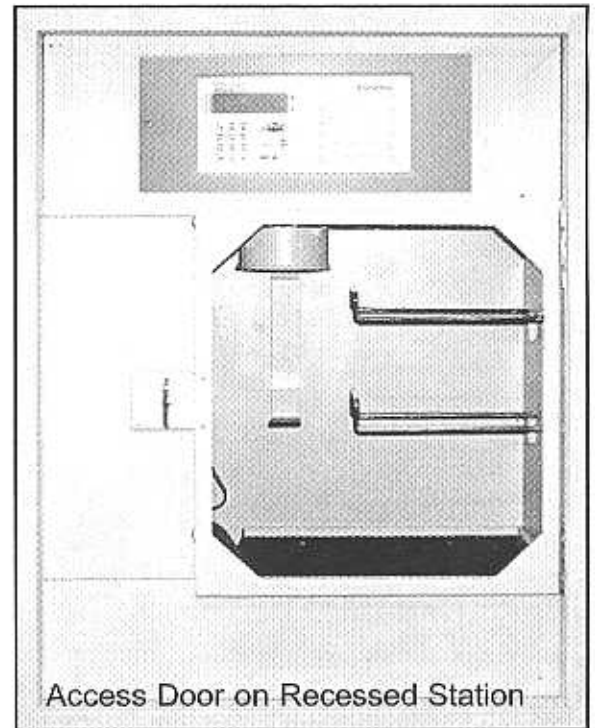

### Ordering Information for the Station Access Door

<u>Description</u>	<u>Part Number</u>
<i>4-inch Station Access Door</i>	Part #056-6131-03
<i>6-inch Station Access Door</i>	Part #056-6131-02

For more information, contact:

USA: 10825 East 47th Avenue, Denver, CO 80236; phone (800) 396-9666; fax (303) 373-7871  
Canada: #7-1200 Aerowood Drive, Mississauga, Ontario L4W 2S7; phone (905) 629-2400  
or visit us on the web at [www.translogic-corp.com](http://www.translogic-corp.com); email: [info@swisslog.com](mailto:info@swisslog.com)

swisslog