

SWISSLOG SPECIFICATIONS

STATION ACCESS DOOR FOR RECESSED QUANTUM PNEUMATIC TUBE STATIONS



Swisslog's Station Access Door provides controlled access to Quantum recessed stations. The Station Access Door provides added safety and security through the use of an electro-magnetic lock and is ideal for stations located in public areas.

Designed for Stations Using Any PTS Control Panel

Swisslog's Station Access Door is easy to install on both 4-inch and 6-inch Quantum recessed stations using either Quantum or Trans-Logic control panels.

The Station Access Door prevents unauthorized access to the station bin using electromagnetic technology. The electronic keypad is constructed with a smooth, stainless steel surface providing durability and long-life. Entry of a valid PIN on the station door keypad deactivates the lock. When an operator releases the spring-loaded door, it closes and the lock activates after a programmable timer expires. The Station Access Door stores up to 5 user PIN combinations (up to 8-digits each). The PIN combinations can be changed using a master code.

Features & Benefits

- > Stations located in public areas benefit from added security, preventing unauthorized access to station contents and from initiating system sends
- > Prevents access to sensitive items by unauthorized persons
- > Addresses HIPAA concerns by increasing security and patient privacy

Station Access Door for Quantum Stations



Specifications

The Station Access Door for Quantum stations is constructed of powder-coated steel with a clear polycarbonate window. The door is available in both black and tan colors to match your station and is compatible with 4-inch and 6-inch Quantum stations.

Part Numbers:

Black: 56678701

Tan: 56678702

Dimensions:

Door

Length: 16"

Width: 22.35"

Window


Length: 11"

Width: 15.75"

Power Requirements:

115 VAC, 60 Hz

(available at station)

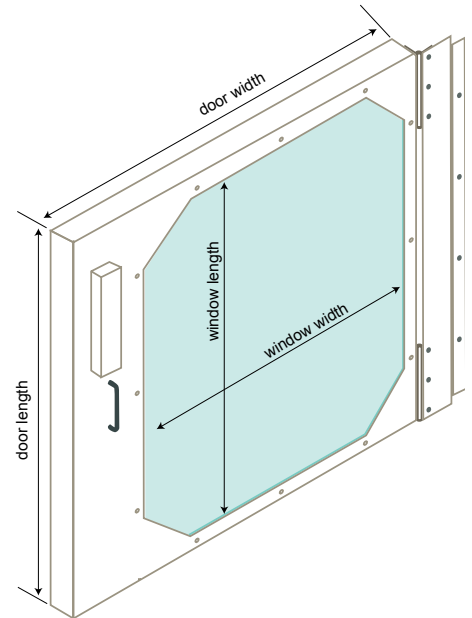

Other Station Access Doors:

Station Access Door for Pevco Stations (CM# PTS-208)

Station Access Door for TransLogic Stations* (CM# PTS-207)

Due to ongoing improvement programs, Swisslog reserves the right of production or design change without notice or obligation.

For More Information in North America:

Swisslog Healthcare Solutions

Email: healthcare@swisslog.com

USA: (800) 764-0300 | (800) 525-1841 x7844

Canada: (877) 294-2831 | (905) 629-2400

©2009 Swisslog
CM# PTS-209

WWW.SWISSLOG.COM